



pastoe rotsoord 3 po box 2152 3500 gd utrecht holland tel +31 30 258 55 55 fax +31 30 252 23 40 info@pastoe.com www.pastoe.com

supplies

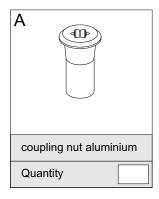


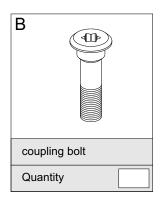


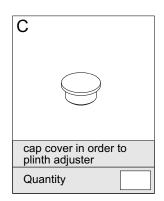

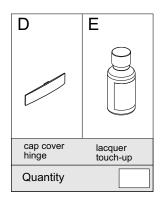


assembly instructions

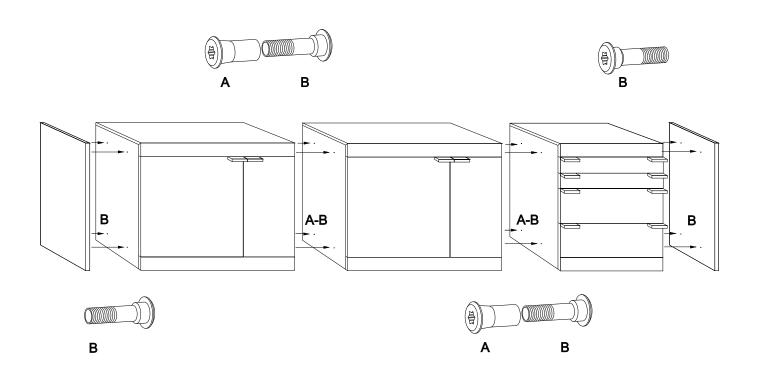


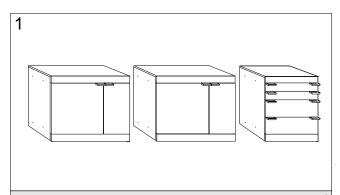


Place the bodies in the correct order at a short distance from each other.

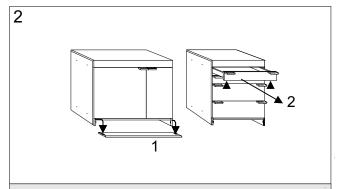



First demount the plinth (1) and then, if present, the drawers. To do this, grip the snappers on the underside of the drawer, and pull forward.

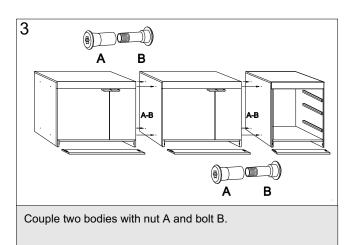

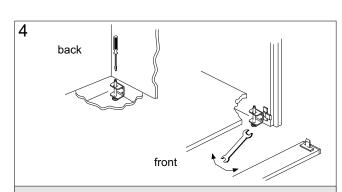


Level the bodies by turning the adjustable legs and the adjusting brace (only in combiantion with a separation) which are under the bottom, with a spanner. Then mount the plinth and place the cap cover (C).

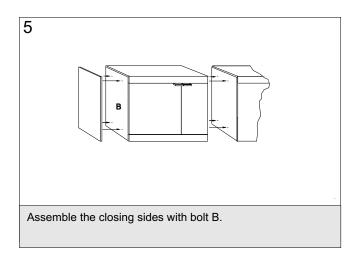

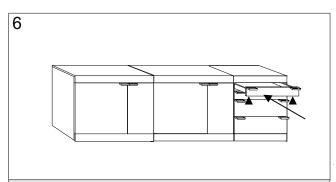

Place the drawers in the body. To do this, pull the drawer runners out, place the drawers on them and slide them back in. If necessary, the height of the drawers can be adjusted by means of the wheels underneath the drawer.

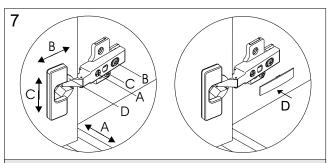


Adjust the doors, if desired:

A: adjusting the joints, horizontal positioning,

B: adjusting the depth, C: adjusting the height.

D. On-/off switch damper

Finally, place the capcover on the hinge.

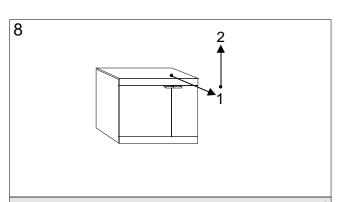

When replacing the top: first slide the top to the front and then lift it.